
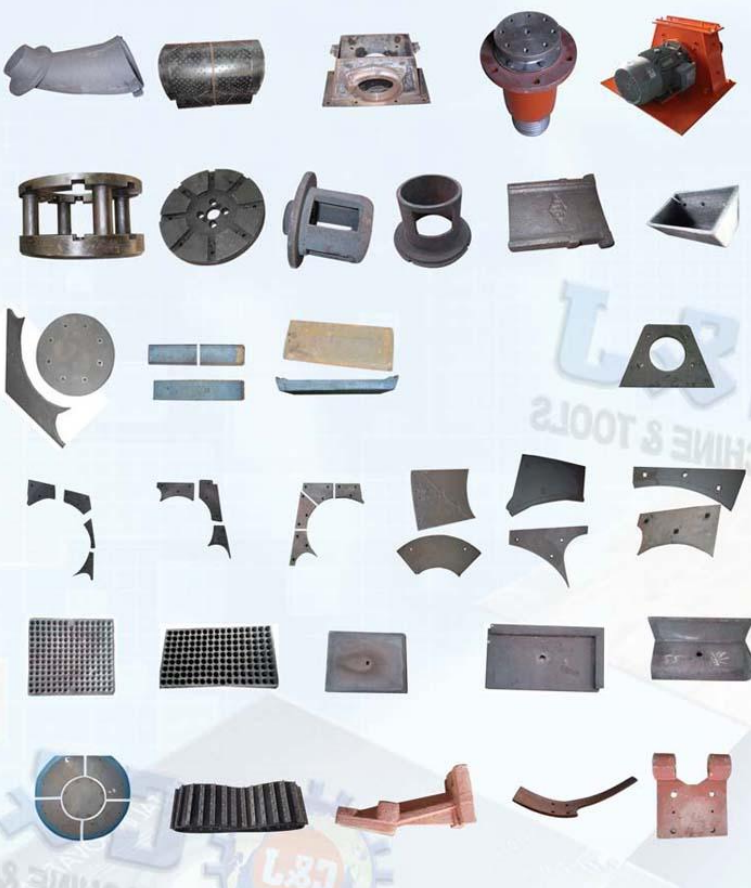





Spare Parts

L&L MACHINE & TOOLS  www.vixie.com E-Mail: Sales@vixie.com info@vixie.com



Hotline: 0086-13821002229 Fax: 0086-212-83831883 83831109

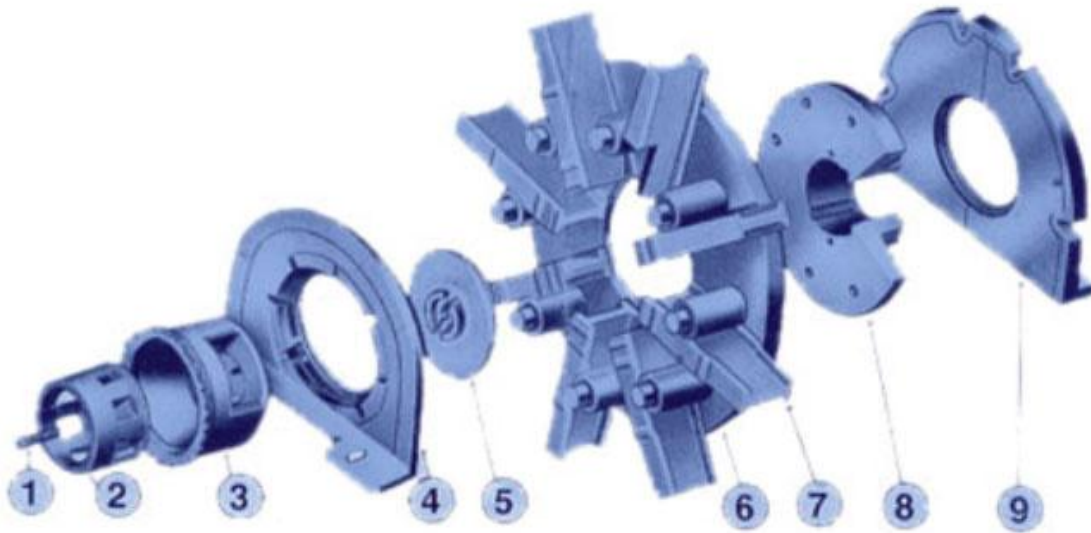

Buy the Best Replacement Parts for all types of Shot Blasting Machines from us. We offer spares for all international brand manufactured by us in our most modern alloy foundry.

Wheel Parts

- | | | |
|------------------|-------------------------|-------------|
| 1. Impeller Bolt | 4. Control Cage Adaptor | 7. Blade |
| 2. Impeller | 5. Centering Plate | 8. Hub |
| 3. Control Cage | 6. Wheel | 9. Hub Seal |

Blast Wheel

Made of special Steel heat treated and dynamically balanced Blades are made of Chrome alloy and last longer Chain link for Tumbleblast and many other machine.

Install sound absorber for reducing the noise level. Steel shots are available in all sizes. long life nozzle for compressed air Blast Machines.

Impeller are available in various sizes and shell moulded. Made of Alloy steel, hardened and excellent wear resist properties. Protect inside cabinet

Ask for New Wheel part, we can replace your wheel with our new Wheel which will through more abrasive at lower HP and save Power. We offer Blast Wheels from 7.5kw to 80kw Capacity and spares for all International Brands in our most modern Alloy Foundry.

Features:

The insertion and removal of blades are very simple & there are fewer number of steps involved as under thereby taking the least time to replace.

- a) Remove the top cover of the wheel housing & the top liner.
- b) Unscrew the bolt.
- c) Remove the blades.
- d) Insert blades and tighten the bolts.
- e) Place the top liner & close housing cover.

The wheel replacement is also very simple. No need of removal of complete wheel liners, only blade, impeller, control cage and top liner are to be removed. Thus the wheel replacement does not take more than 60 minutes under any circumstances.